



## Einteilung (Personenkraftwagen/Nutzfahrzeuge) in die verschiedenen Schadstoffklassen nach den Emissionsschlüsselnummern

PERSONENKRAFTWAGEN (Pkw)				
Sonstige, Euro 1, Euro 2, Euro 3	Euro 4	Euro 5	Euro 6	
0400	0430	0447	35A0	36N0
0401	0431	0448	35B0	36O0
0402	0432	0449	35C0	36P0
0403	0433	0450	35D0	36Q0
0404	0434	0451	35E0	36R0
0405	0435	0452	35F0	36S0
0406	0436	0453	35G0	36T0
0407	0437	0454	35H0	36U0
0408	0438	0455	35I0	36V0
0409	0439	0456	35J0	36W0
0410	0440	0457	35K0	36X0
0411	0441	0458	35L0	36Y0
0412	0442	0459	35M0	36ZA
0413	0443	0460		36ZB
0414	0444	0461		36ZC
0415	0445	0462		36ZD
0416	0446	0463		36ZE
0417	0471	0464		36ZF
0418	0472	0465		30ZX
0419	0473	0466		30ZY
0420	0474	0467		30ZZ
0421	0475	0468		
0422	0477	0469		
0423	0488	0470		
0424	0498			
0425	9991			
0426	9992			
0427	99			
0428				
0429				

NUTZFAHRZEUGE				
sonstige, Euro I, Euro II, Euro III	Euro IV	Euro V, EEV	Euro VI	
0600	0642	0635	0683	66A0
0601	0643	0680	0684	66B0
0602	0644	0681	0690	66C0
0610	0645		0691	
0611	0650			
0612	0651			
0620	0652			
0621	0653			
0622	0654			
0630	0655			
0631	0660			
0632	0661			
0633	0670			
0634	0671			
0640	0688			
0641	0698			